

FORETS

Forets à centrer

Zentrierbohrer

Center drills

Punte a centrare

2

4

0

8


5

5



240.855

MD
HM/SC
MG

Forets
Bohrer
Drills
Punte



60°
Forme A

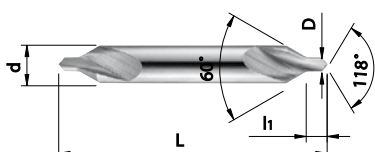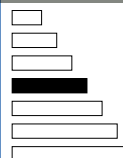

OPTI
cut



DIN 333A

D_{h5}	d_{k12}	l_1	L	Non revêtu
0.5	3.15	0.7	25	240.855-0.5-3.15
0.8	3.15	1.1	25	240.855-0.8-3.15
1	3.15	1.45	31	240.855-1-3.15
1	4	1.45	35	240.855-1-4
1.25	3.15	1.75	31	240.855-1.25-3.15
1.5	5	2.2	40	240.855-1.5-5
1.6	4	2.2	35	240.855-1.6-4
2	5	2.7	40	240.855-2-5
2	6	2.7	45	240.855-2-6
2.5	6.3	3.35	45	240.855-2.5-6.3
2.5	8	3.35	50	240.855-2.5-8
3	10	4.15	55	240.855-3-10
3.15	8	4.15	50	240.855-3.15-8
4	10	5.3	55	240.855-4-10