


FRAISES


Fraises en bout

Walzenstirnfräser

Shell End mills

Frese Frontali

5	2	7	1	5	1	3	0	B	527.151.30	527.151.30B
HSS Co8	Fraises Fräser End mills Frese			Z6 - 12 		$\lambda 30^\circ$ $\gamma \sim 15^\circ$		TiCN		

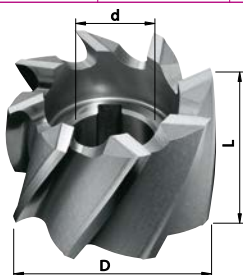

OPT
hss

Type N
DIN 1880

D_{js16}	D_{H7}	L	Z	Non revêtu	Revêtu TiCN
40	16	32	6	527.151.30-040	527.151.30B-040
50	22	36	8	527.151.30-050	527.151.30B-050
63	27	40	8	527.151.30-063	527.151.30B-063
80	27	45	10	527.151.30-080	527.151.30B-080
100	32	50	12	527.151.30-100	527.151.30B-100