

FORETS

Forets à pointer NC

NC-Anbohrer

NC spot drills

Punte centratrici CN

5

4

0

7



6

5


540.765

HSS Co5

Forets
Bohrer
Drills
Punte



90°
120°

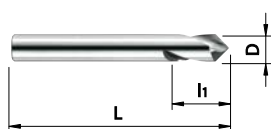

OPTI
hss



Type NC
Norme OPTI

Angle	D _{h6}	l ₁	L	Non revêtu	Non revêtu
90°	2	8	49	540.765-090-02	
	3	10	50	540.765-090-03	
	4	12	52	540.765-090-04	
	5	15	60	540.765-090-05	
	6	20	66	540.765-090-06	
	8	25	79	540.765-090-08	
	10	25	89	540.765-090-10	
	12	30	102	540.765-090-12	
	16	35	115	540.765-090-16	
	20	40	131	540.765-090-20	
120°	2	8	49		540.765-120-02
	3	10	50		540.765-120-03
	4	12	52		540.765-120-04
	5	15	60		540.765-120-05
	6	20	66		540.765-120-06
	8	25	79		540.765-120-08
	10	25	89		540.765-120-10
	12	30	102		540.765-120-12